

Leopard

A New Concept Seating

Instructions for Use



okamura

Safety Instructions (Make sure to follow these instructions)

<Icons>

This user's guide and indication on the product contain various icons to ensure safe and proper use of the product and to prevent an injury to you or other people and damage to property. Their indication and meanings are as shown below. Make sure to familiarize yourself with them before reading this document.




Caution

Indicates that improper handling may cause injury or property damage.


Caution

- Avoid rough handling and use for purposes other than originally intended.


Using the chair as a trolley by loading can pose a danger of rollover accident or falling of load.

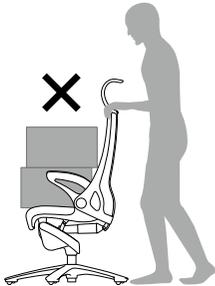


Do not stand up on the chair or sit on the front edge of the seat or armrest. Failure to observe this precaution may cause you to fall, resulting in injury.

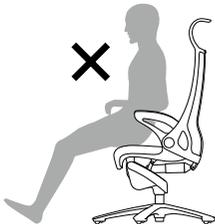

- Take care not to get your finger or hand caught in the space in the joint between the back and arm.

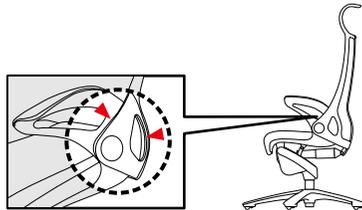


- Take care not to get your finger or hand caught in the space in the reclining movable part at the back of the seat.

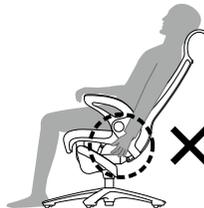


Caution


- Do not put your fingers or hand in the space between the back of the seat and the back surface when seating. Failure to observe this precaution could result in injury.

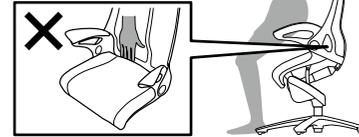

- Make sure that the hand of a child or someone else is not put below or around the chair before reclining the back of the chair or returning the back.

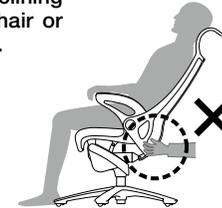


- A 5-star base type has low-profile casters. Lift the chair when moving on an uneven surface.

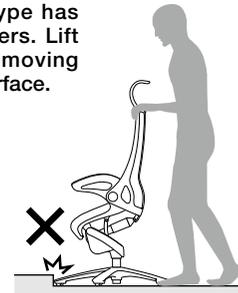

- When using the chair with a table, take enough care not to allow it to come into contact with the table when standing up.



- The ring base type is equipped with an automatic return mechanism. Do not allow the seat to rotate in excess of 180 degrees. Repeated undue rotation could result in failure.

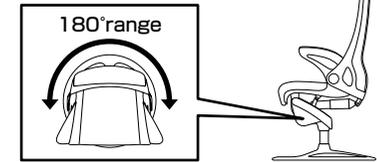

- Disassembly and repair

Since the shock absorber mechanism is filled with high-pressure gas, it is very dangerous for you to disassemble and repair it when any problem is detected. Make sure to contact our sales representative.

- Precautions in modification

Since modification made by you could pose a safety hazard, make sure to contact our sales representative beforehand. It is your responsibility to give necessary safety consideration for unauthorized modification.

Installation Instructions

We are not responsible for any malfunction resulted from failure to observe the following precautions.

Make sure to use the chair indoors.

- Do not use the chair outdoors or in an area exposed to water/liquid as it can cause warping or mold and mildew, resulting in failure of the chair.

Avoid an area exposed to direct sunlight, as it may cause deformation or discoloring.

- When installing the chair near a window, always protect from sunlight using drapes or blinds.

Avoid an area exposed to high temperature and humidity or significantly dry air, as it may cause deformation or discoloring or mold and mildew.


Avoid an area exposed to direct heat or wind, as it may cause deformation or discoloring.

Install the chair so that it stays in a horizontal position.

- When installing the chair, make sure that the main body stays in a horizontal position. If the chair is installed in a position that it does not keep level, it can cause deformation of the main body or failure in the moving part.
- Since the ring base type is fitted with the edge of the leg, it won't scratch the floor. If you are worried about it, contact our sales representative.

The product label is placed under the housing. For any inquiries, please contact our official local dealer or branch.

okamura	
Product	○○○○
Model Code	○○○○ ○○○
Lot No.	○○○○○○

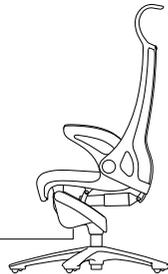


Names of Parts and Mechanism

●5-star base type

●Ring base type



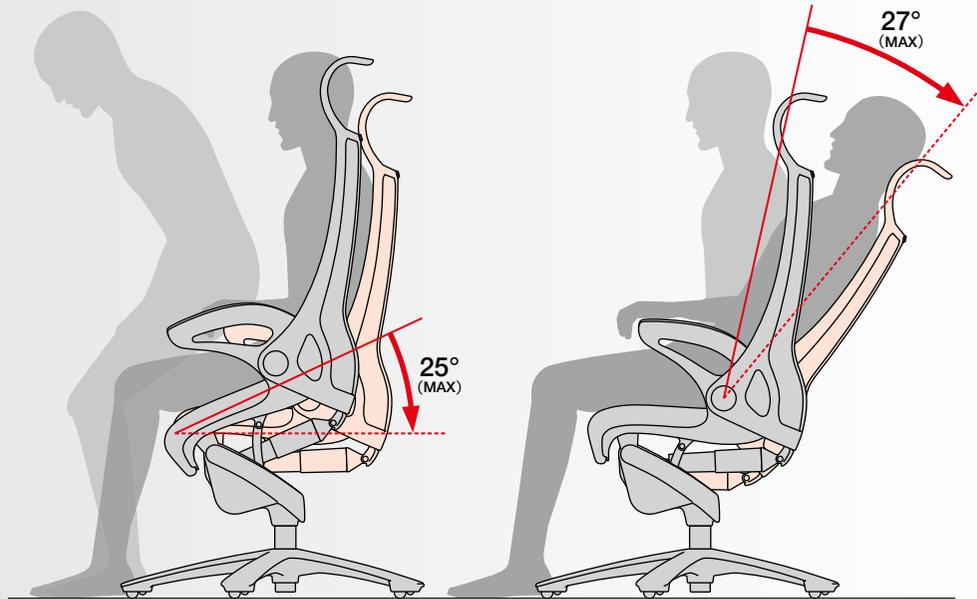

Instructions to Extend the Life of Product

We are not responsible for any malfunction resulted from failure to observe the following precautions.

Instructions for Use and Maintenance

- The key to long life is to retighten bolts and screws when they have worked loose. Make sure to retighten them early.
- Do not use the chair in areas where there is excessive steam or moisture. Exposure to moisture can cause metal parts to rust.
- If the chair gets wet, dry it with a soft cloth.
- If tea, coffee, detergent or chemicals are spilled on the chair, immediately clean the area to prevent permanent stains.
- Keep this manual handy for future reference.
- Carrying out frequent maintenance procedures will greatly extend the life and quality of the chair.

Care

Regular care.

- For regular care wipe the chair with a soft, dry cloth.

Procedure for cleaning a heavily soiled chair.

- Moisten a soft cloth with a neutral detergent (1-3%). Wring out the cloth and wipe off the soiled area. Finish by drying with a soft cloth.

* Leather care...

- If food or drink is spilled on the leather, wipe the area with a warm, damp cloth immediately. If not immediately cleaned, substances spilled on the chair can oxidize and exposure to ultraviolet rays can cause permanent stains and damage.

Care Instructions.

- Before using a commercially available cleaner to clean the whole chair, do a small test on an area of the chair that will not be easily noticed to check for any discoloration.

* Care of mesh material and cushion parts...

- After dusting off the mesh part with hand, vacuum the chair. Since the cushion part cannot be cleaned, it is recommended to replace it with a new one if it is significantly dirty.

* Leather maintenance...

- If the leather becomes dry or hard, clean the surface first, and finish with commercially available furniture cleaner.
- Avoid using shoe cream, thinner and benzene as they will cause damage.
- Since hair dressing damages leather, carefully wipe it off.

Check below before suspecting it is defective

Description of problem	Items to be checked	Solution
Casters do not roll smoothly.	Aren't casters tangled with foreign objects (e.g. lint and yarn)?	Remove foreign substances or replace the casters with new ones.
Chair makes noise.		Contact our official dealer you purchased from or our branch.

Main material

Part	Main material
Base	Aluminum die cast >ADC<
Seat cushion	Polypropylene >PP< + polyurethane >PUR <
Seat shell	Polyamide >PA<
Back mesh	Polyester
Back frame	Polyamide >PA<
Arm pad	Acrylonitrile butadiene styrene >ABS< + polyurethane >PUR <
Housing	Aluminum die cast >ADC<

- * The marks >□□□< indicate material identification code number. This should be used for recycling.
- * Please note that product specifications are subject to change without prior notice.
- * There may be marks unique to the animal found on the surface of the leather, there is no harm in the quality and function.

okamura

OKAMURA CORPORATION

INTERNATIONAL SALES & MARKETING DIVISION

2-14-27, Akasaka, Minato-ku, Tokyo 107-0052, JAPAN

Tel : +81-3-5561-4085 Fax : +81-3-5561-4086

<http://www.okamura.jp>

G96220
2010-01